
Huawei FusionServer 1288H V5

White Paper

Issue 06

Date 2018-05-14

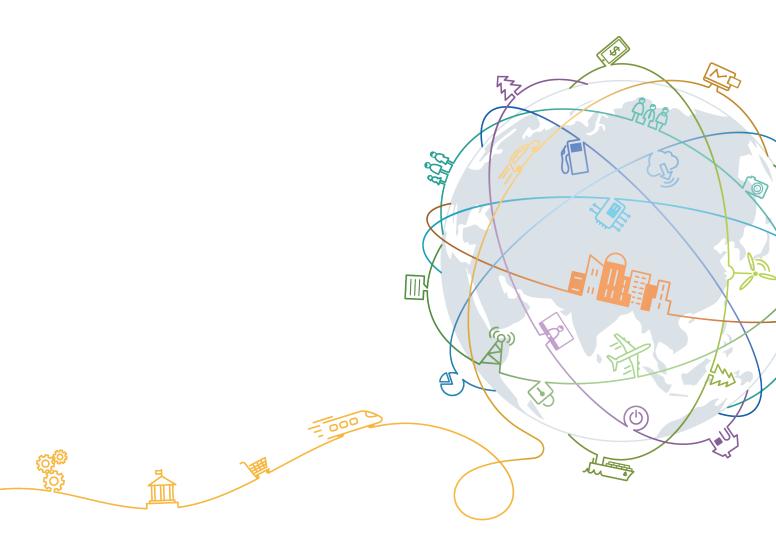



Copyright © Huawei Technologies Co., Ltd. 2018. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks and Permissions

All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between Huawei and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base

Bantian, Longgang Shenzhen 518129

People's Republic of China

Website: http://e.huawei.com

About This Document

Purpose

This document describes the 1288H V5 in terms of its appearance, performance parameters, and component compatibility to help users have a profound understanding of the server.

Intended Audience

This document is intended for:

- Huawei presales engineers
- Channel partner presales engineers
- Enterprise presales engineers

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
DANGER	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
MARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
A CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
⚠ NOTICE	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance deterioration, or unanticipated results.
	NOTICE is used to address practices not related to personal injury.

Symbol	Description
NOTE	Calls attention to important information, best practices, and tips.
	NOTE is used to address information not related to personal injury, equipment damage, and environment deterioration.

Change History

Changes between document issues are cumulative. The latest document issue contains all the changes made in earlier issues.

Issue 06 (2018-05-14)

This issue is the sixth official release.

Mode	Change Description	
Modified	Modified video card description. For details, see Table 5-1.	

Issue 05 (2018-04-18)

This issue is the fifth official release.

Mode	Change Description	
New	Added TPM specifications. For details, see 5.1 Technical Specifications .	
Modified	Modified operating temperature specifications.	

Issue 04 (2018-02-07)

This issue is the fourth official release.

Mode	Change Description	
New	Added NVMe configurations.	

Issue 03 (2017-11-30)

This issue is the third official release.

Mode	Change Description	
New	Added the GPU card and Broadcom SAS3508 RAID controller card specifications.	

Issue 02 (2017-08-18)

This issue is the second official release.

Mode	Change Description	
New	Added a note about the condition for supporting the maximum resolution of the video card integrated into the mainboard.	

Issue 01 (2017-08-07)

This issue is the first official release.

Contents

About This Document	ii
1 Overview	1
2 Features	2
3 Logical Structure	5
4 Hardware Description	
4.1 Appearance	
4.2 Ports	9
4.3 Indicators and Buttons.	12
4.4 Riser Cards and PCIe Slots	20
4.5 Physical Structure	22
5 Product Specifications	24
5.1 Technical Specifications.	24
5.2 Physical and Environmental Specifications	
6 Component Compatibility	32
6.1 CPU	
6.2 Memory	
6.3 Storage	37
6.4 I/O Expansion	39
6.5 PSU	39
6.6 OS and Software Support	40
7 System Management	41
8 Warranty	43
9 Certifications	46
10 References	48

$oldsymbol{1}$ Overview

Huawei FusionServer 1288H V5 is a 1U 2-socket rack server for Internet, Internet data center (IDC), cloud computing, enterprise, and telecom service applications.

Marked H12H-05 on the nameplate, the 1288H V5 is ideal for IT core services, cloud computing virtualization, high-performance computing, distributed storage, big data processing, enterprise or telecom service applications, and other complex workloads. It combines low power consumption with high scalability and reliability, and ease of deployment and management.

Figure 1-1 shows the appearance of the 1288H V5 server with eight hard disks.





2 Features

Performance and Scalability

The following features improve the performance and scalability of the 1288H V5:

- Intel® Xeon® Scalable processors ensure high processing performance by providing up to 28 cores, 3.6 GHz frequency, 38.5 MB L3 cache, and two 10.4 GT/s Ultra Path Interconnect (UPI) links between processors.
 - Each 1288H V5 supports two processors with 56 cores and 112 threads to maximize the concurrent execution of multithreaded applications.
 - Intel[®] Xeon[®] Scalable processors support L2 cache. Each core exclusively uses 1 MB L2 cache and a maximum of 1.375 MB L3 cache.
 - Intel[®] Turbo Boost Technology 2.0 enables processor cores to run at maximum speeds during peak hours by temporarily going beyond the processor thermal design power (TDP).
 - Intel[®] Hyper-Threading Technology enables each processor core to run up to two threads, improving parallel computation capability.
 - Intel[®] Virtualization Technology integrates hardware-level virtualization functions to allow OS vendors to better use hardware to address virtualization workloads.
- Twenty-four DDR4 error checking and correcting (ECC) RDIMMs or load-reduced DIMMs (LRDIMMs) provide a maximum memory speed of 2666 MT/s and a maximum memory capacity of 1,536 GB, featuring high speed and availability. The maximum memory bandwidth is 249.9375 GB/s in theory.
- The 1288H V5 supports flexible hard disk configurations and provides elastic and scalable memory capacities to satisfy storage capacity and upgrade requirements.
- The I/O performance of pure SSDs is higher than that of mixed configuration of SSDs and HDDs and 100 times that of pure HDDs.
- Intel® Advanced Vector Extensions 2.0 (AVX-512) improves floating-point computing performance for computing-intensive applications.
- The 1288H V5 supports various LANs on motherboard (LOMs) and flexible NICs to provide rich network ports.
- The 1288H V5 supports up to three Peripheral Component Interconnect Express (PCIe) 3.0 slots.

• The Intel® Xeon® Scalable processors incorporate the PCIe 3.0 controller using the Intel Integrated I/O technology to shorten I/O latency and enhance overall system performance.

Availability and Serviceability

The 1288H V5 provides the following features to improve availability and serviceability:

- The 1288H V5 uses carrier-class components and follows the engineering process, which dramatically improves system reliability.
- The 1288H V5 uses hot-swappable SAS/SATA hard disks or NVMe SSDs. It supports redundant array of independent disks (RAID) 0, 1, 1E, 10, 5, 50, 6, and 60 and offers RAID cache. A supercapacitor is used to protect RAID cache data from power failures.
- SSDs offer better reliability than HDDs, prolonging system uptime.
- The web user interface (WebUI) of the Intelligent Baseboard Management Controller (iBMC), UID and HLY LEDs, and fault diagnosis LED on the front panel help technical support personnel promptly obtain the status of key components and locate failed (or failing) components. This simplifies servicing, accelerates troubleshooting, and improves system availability.
- The iBMC monitors system parameters in real time, triggers alarms, and performs recovery actions in case of failures, minimizing system downtime.
- Huawei provides a three-year warranty for parts replacement and limited onsite repair for the servers used in China, with the 10-hour-a-day, 5-day-a-week next business day (NBD) support program. Optional service upgrades are available.
- Huawei provides a three-year warranty for parts replacement and repair for the servers used outside China, with the 9-hour-a-day, 5-day-a-week NBD support program. Huawei delivers the repaired or new parts within 45 calendar days after receiving the defective parts.

Manageability and Security

The 1288H V5 provides the following features to enhance manageability and security:

- The built-in iBMC module monitors server operating status and provides remote management.
- The Network Controller Sideband Interface (NC-SI) feature enables a network port to function as a management network port and a service port, which maximizes the return on investment (ROI) for customers. NC-SI is disabled by default. You can enable it on the iBMC WebUI or in the BIOS.
- The integrated industry-standard Unified Extensible Firmware Interface (UEFI) increases setup, configuration, and update efficiency, and simplifies fault handling.
- The front bezel in the server chassis is locked to ensure local data security and reliability.
- The Intel® Advanced Encryption Standard–New Instructions (AES NI) support faster and stronger encryption.
- The Intel[®] Execute Disable Bit (EDB) function prevents certain types of malicious buffer overflow attacks when working with a supported OS.
- The Intel® Trusted Execution technology provides enhanced security by using hardware-based defense against malicious software attacks, allowing an application to run in an isolated space from all other applications running on the OS.

NOTE

The service network port supporting NC-SI has the following features:

- The service network port can be bound to a network port (host network port 1 by default) on a flexible or standard NIC.
- The service network port allows you to enable, disable, and configure a VLAN ID. A VLAN ID is disabled by default, and the default VLAN ID is 0.
- The service network port supports IPv4 and IPv6 addresses. You can set an IP address, subnet mask, default gateway, and IPv6 address prefix length for the service network port.

Energy Efficiency

The 1288H V5 offers the following features to save energy:


- The 1288H V5 supports 80 Plus Platinum power supply units (PSUs). The PSUs provide 94% power efficiency at 50% loads.
- The 1288H V5 supports active-standby power supplies and high-voltage DC (HVDC), improving power supply efficiency.
- Efficient VRD PSUs reduce the loss in DC/DC power conversion.
- The 1288H V5 supports area-based and intelligent fan speed adjustment, Proportional-Integral-Derivative (PID) speed adjustment, and intelligent processor frequency adjustment, reducing power consumption.
- The improved thermal design with energy-efficient fans ensures optimal heat dissipation and reduces system power consumption.
- The 1288H V5 supports power capping and power control.
- Hard disks are not powered on simultaneously, which reduces the server startup power consumption.
- The Intel® Intelligent Power Capability allows a single processor to be powered on or off based on site requirements.
- Low-voltage Intel[®] Xeon[®] Scalable processors consume less energy and apply to data centers and telecommunication environments that have power and thermal limitations.
- SSDs consume 80% less power than HDDs.


Customization

The 1288 V5 is a Huawei proprietary server. Huawei also provides customized development in a timely manner.

3 Logical Structure

 Figure 3-1 shows the logical structure of the 1288H V5.



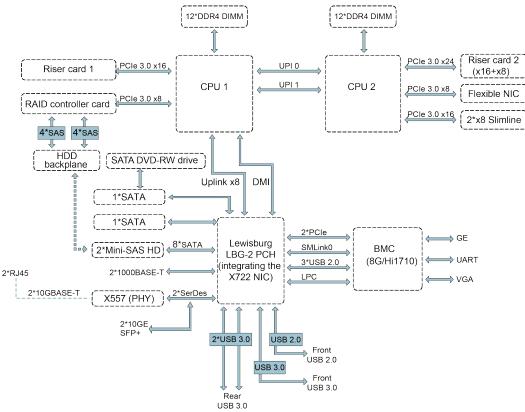

- The 1288H V5 supports two Intel[®] Xeon[®] Scalable CPUs and 24 DDR4 DIMMs. The CPUs interconnect with each other through two Ultra Path Interconnect (UPI) links at speeds of up to 10.4 GT/s.
- The CPUs connect to two PCIe riser cards through PCIe buses and the riser cards provide various PCIe slots.
- The RAID controller card on the mainboard connects to CPU 1 through PCIe buses, and to the hard disk backplanes through SAS signal cables. The hard disk backplanes support various local storage configurations.

- The LBG-2 bridge chip provides two GE electrical LOM ports, and two 10GE optical LOM ports or two 10GE electrical LOM ports (through the X557 PHY).
- The Huawei Hi1710 management chip provides a VGA port, management network port, and debugging serial port.

4 Hardware Description

- 4.1 Appearance
- 4.2 Ports
- 4.3 Indicators and Buttons
- 4.4 Riser Cards and PCIe Slots
- 4.5 Physical Structure

4.1 Appearance

Front Panel


• Figure 4-1 shows the front panel of a server with four 3.5-inch hard disks.

Figure 4-1 Front panel of a server with four 3.5-inch hard disks



• Figure 4-2 shows the front panel of a server with eight 2.5-inch hard disks.

Figure 4-2 Front panel of a server with eight 2.5-inch hard disks

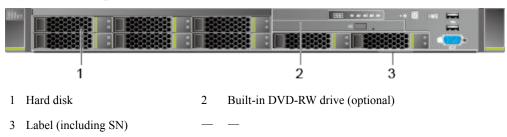

• Figure 4-3 shows the front panel of a server with ten 2.5-inch hard disks.

Figure 4-3 Front panel of a server with ten 2.5-inch hard disks



1 Hard disk

2 Label (including SN)

SN

The SN on the label is a string that uniquely identifies a server. The SN is required when you contact Huawei technical support.

Figure 4-4 shows the SN format.

Figure 4-4 SN example

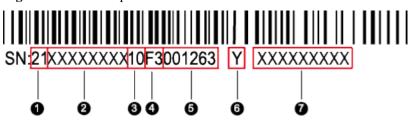



Table 4-1 SN description

No.	Description		
1	SN ID (two characters), which is permanently set to 21.		
2	Material identification code (eight characters), that is, processing code.		
3	Vendor code (two characters). 10 indicates Huawei and other values indicate outsourcing vendors.		
4	Year and month (two characters).		
	• The first character indicates the year. Digits 1 to 9 indicate 2001 to 2009, letters A to H indicate 2010 to 2017, letters J to N indicate 2018 to 2022, and letters P to Y indicate 2023 to 2032.		
	NOTE The years from 2010 are represented by upper-case letters excluding I, O, and Z because the three letters are similar to digits 1, 0, and 2.		
	The second character indicates the month. Digits 1 to 9 indicate January to September, and letters A to C indicate October to December.		
5	Serial number (six characters).		
6	RoHS compliance (one character). Y indicates environmental protection processing.		

No.	Description	
7	Internal model, that is, product name.	

Rear Panel

Figure 4-5 shows the rear panel of a server.

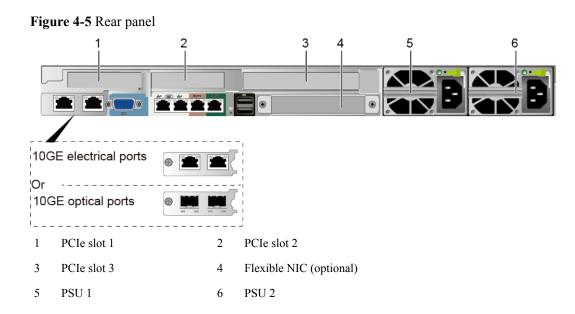


4.2 Ports

Front Panel


• Figure 4-6 shows the ports on the front panel of a server with four 3.5-inch hard disks.

Figure 4-6 Front panel of a server with four 3.5-inch hard disks

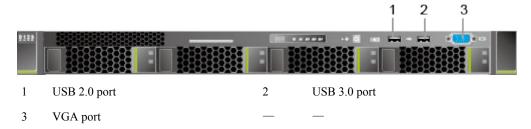

• Figure 4-7 shows the ports on the front panel of a server with eight 2.5-inch hard disks.

Figure 4-7 Front panel of a server with eight 2.5-inch hard disks

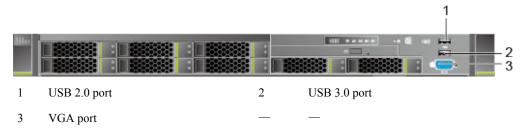

• Figure 4-8 shows the ports on the front panel of a server with ten 2.5-inch hard disks.

Figure 4-8 Front panel of a server with ten 2.5-inch hard disks

 


Table 4-2 describes the ports on the front panel.


Table 4-2 Description of ports on the front panel

Port	Type	Description
VGA port	DB15	The VGA port is used to connect a terminal, such as a monitor or KVM.
USB port	USB 2.0/USB 3.0	The USB ports allow USB devices to be connected to the server.
		NOTE Before connecting an external USB device, check that the USB device functions properly. The server may operate abnormally if an abnormal USB device is connected.

Rear Panel

Figure 4-9 shows the ports on the rear panel of a server.

Figure 4-9 Rear panel

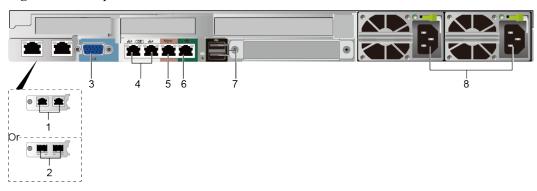

- 1 10GE electrical ports
- 3 VGA port
- 5 Management network port
- 7 USB 3.0 ports

- 2 10GE optical ports
- 4 GE electrical ports
- 6 Serial port
- 8 PSU sockets

Table 4-3 describes the ports on the rear panel.

Table 4-3 Description of ports on the rear panel

Port	Туре	Qua ntity	Description
10GE electrical port	10GBASE-T	2	The mainboard provides two 10GE electrical ports or two 10GE optical ports.
10GE optical port	10GE SFP+	2	
VGA port	DB15	1	The VGA port is used to connect a terminal, such as a monitor or KVM.
GE electrical port	1000BASE-T	2	Server service network port.
Serial port	RJ45	1	The serial port is used as the system serial port by default. You can set it as the iBMC serial port by using the iBMC command. This port is used for debugging.
Management network port	1000BASE-T	1	The 1000 Mbit/s Ethernet port is used for server management.
USB port	USB 3.0	2	The USB ports allow USB devices to be connected to the server.
			NOTICE Before connecting an external USB device, check that the USB device functions properly. The server may operate abnormally if an abnormal USB device is connected.

Port	Type	Qua ntity	Description
PSU socket		1 or 2	Determine the quantity of PSUs based on actual requirements, but ensure that the rated power of the PSUs is greater than that of the server. When one PSU is used, Predicted PSU Status on the iBMC WebUI cannot be set to Active/Standby .

Table 4-4 LOM port description

LOM Port	Chip Model	Rate Negotiation Mode	Supported Rate	Not Supported Rate
10GE optical port	X722	Auto- negotiation 10000 Mbit/s (full duplex)	10000 Mbit/s	10/100/1000 Mbit/s
10GE electrical port		Auto- negotiation 1000 Mbit/s (full duplex)	1000 Mbit/s	10/100 Mbit/s
		Auto- negotiation 10000 Mbit/s (full duplex)	10000 Mbit/s	10/100 Mbit/s
GE electrical port		Auto- negotiation 1000 Mbit/s (full duplex)	1000 Mbit/s	10/100 Mbit/s

NOTE

- The LOM ports do not support forcible rates.
- The GE LOM electrical port does not support SR-IOV.


4.3 Indicators and Buttons

Front Panel

• Figure 4-10 shows the indicators and buttons on the front panel of a server with four 3.5-inch hard disks.

6 UID button/indicator


Figure 4-10 Front panel of a server with four 3.5-inch hard disks

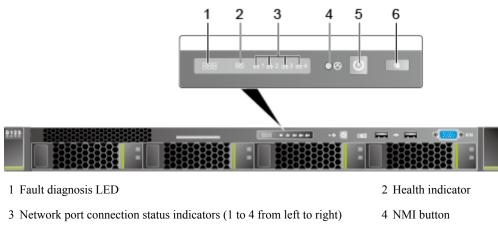

• Figure 4-11 shows the indicators and buttons on the front panel of a server with eight 2.5-inch hard disks.

Figure 4-11 Front panel of a server with eight 2.5-inch hard disks

5 Power button/indicator

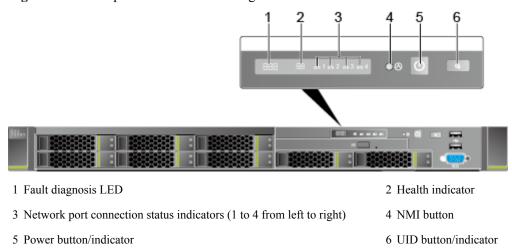

• Figure 4-12 shows the indicators and buttons on the front panel of a server with ten 2.5-inch hard disks.

Figure 4-12 Front panel of a server with ten 2.5-inch hard disks

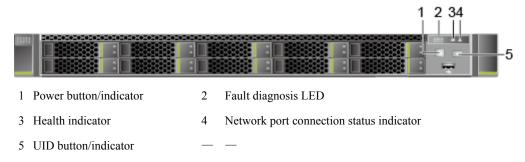


Table 4-5 describes the indicators and buttons on the front panel of a server.

Table 4-5 Description of indicators and buttons on the front panel


Sil k Scr een	Indicator and Button	State Description
888	Fault diagnosis LED	•: The server is operating normally.
	LLD	 Error code: A server component is faulty. For error code details, see the <i>Huawei Rack Server</i> iBMC Alarm Handling.
O	Power button/	Power indicator:
0	indicator	Steady yellow: The server is ready to power on.
		Steady green: The server is properly powered on.
		Blinking yellow: The iBMC is starting.
		Off: The server is not connected to a power source.
		Power button:
		 When the server is powered on, you can press this button to shut down the OS.
		• When the server is powered on, holding down this button for 6 seconds will power off the server.
		 When the server is ready to be powered on, you can press this button to start the server.
@	UID button/ indicator	The UID button/indicator helps identify and locate a server. You can turn on or off the UID indicator by pressing the UID button or remotely running a command on the iBMC CLI.
		UID indicator:
		Steady blue/Blinking blue: The server is being located.
		Off: The server is not being located.
		UID button:
		You can press this button to turn on or off the UID indicator.
		 You can press and hold down this button for 4 to 6 seconds to reset the iBMC.
	Health indicator	Steady green: The server is operating properly.
-		Blinking red at 1 Hz: A major alarm has been generated on the server.
		Blinking red at 5 Hz: A critical alarm has been generated on the server.

Sil k Scr een	Indicator and Button	State Description
0	NMI button	The NMI button triggers a server to generate a non-maskable interrupt. You can press this button or remotely control it through the iBMC WebUI. NOTICE
		 Press the NMI button only when the OS is abnormal. Do not press this button when the server is operating properly.
		 Press the NMI button only for internal commissioning. Before pressing this button, ensure that the OS has the handler for NMI interrupts. Otherwise, the OS may crash. Exercise caution when pressing this button.
읆	Network port connection status	Each indicator shows the status of an Ethernet port on the LOM.
	indicator	 Steady green: The network port is properly connected.
		Off: The network port is not in use or has failed.
		NOTE
		 The indicators correspond to two 10GE and two GE network ports on the mainboard.
		 The LOM has a standby power supply and is not powered off after the service system is powered off. If the network ports are properly connected to other working network devices, the network ports are still connected and the indicators are on.

Rear Panel

Figure 4-13 shows the indicators on the rear panel of a server.

Figure 4-13 Indicators on the rear panel

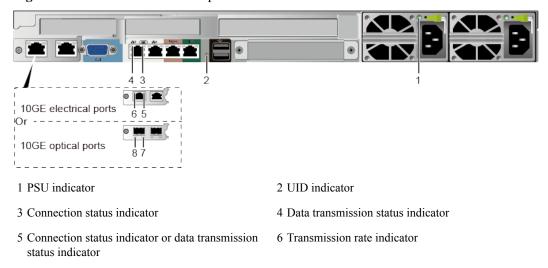

7 Transmission rate indicator

8 Connection status indicator or data transmission status indicator

Table 4-6 describes the indicators on the rear panel of a server.

Table 4-6 Description of indicators on the rear panel

Indicator		State Description			
10GE electrical port	Transmission rate indicator	• Steady green: The data transmission rate is 10 Gbit/s.			
		• Steady yellow: The data transmission rate is 1 Gbit/s.			
		Off: The network port is not connected.			
	Connection status indicator or data	Steady green: The network port is properly connected.			
	transmission status indicator	Blinking green: Data is being transmitted.			
	status murcator	Off: The network port is not connected.			
10GE optical port	Connection status indicator or data	Steady green: The network port is properly connected.			
	transmission status indicator	Blinking green: Data is being transmitted.			
	status murcator	Off: The network port is not connected.			
	Transmission rate indicator	• Steady green: The data transmission rate is 10 Gbit/s.			
		• Steady yellow: The data transmission rate is lower than 10 Gbit/s.			
		Off: The network port is not connected.			
GE electrical port	Connection status indicator	Steady green: The network port is properly connected.			
		Off: The network port is not connected.			
	Data transmission status indicator	Blinking yellow: Data is being transmitted.			
	status muicator	Off: No data is being transmitted.			
UID indicator		The UID indicator helps identify and locate a server. You can turn on or off the UID indicator by pressing the UID button or remotely running a command on the iBMC CLI.			
		Steady blue/Blinking blue: The server is being located.			
		Off: The server is not being located.			

Indicator	State Description
PSU indicator	Steady green: The power input and output are normal.
	Steady orange: The input is normal, but no power output is supplied due to overheat protection, overcurrent protection, short circuit protection, output overvoltage protection, or some component failures.
	Blinking green at 4 Hz: under online upgrade.
	Blinking green at 1 Hz:
	- The input is normal, the server is in the standby state, and the PSU is in MV6 mode. (The output voltage is 6.7 V.)
	- The input is overvoltage or undervoltage.
	- The PSU is in deep hibernation mode.
	Off: No AC power is supplied.

SAS/SATA Hard Disk Indicators

Figure 4-14 shows the SAS/SATA hard disk indicators.

Figure 4-14 SAS/SATA hard disk indicators

 


Table 4-7 describes the SAS/SATA hard disk indicators.

Table 4-7 Description of SAS/SATA hard disk indicators

Indicator	State Description
Hard disk fault indicator	Steady yellow: The hard disk is faulty or the status of a member disk in a RAID array is abnormal.
	Blinking yellow: The server is locating the hard disk or rebuilding a RAID array.
	Off: The hard disk is operating normally.
Hard disk activity indicator	 Steady green: The hard disk is inactive. Blinking green: Data is being read from or written to the hard disk, or synchronized between hard disks. Off: The hard disk is faulty or not detected.

NVMe SSD Indicators

Figure 4-15 shows the NVMe SSD indicators.

Figure 4-15 NVMe SSD indicators



Table 4-8 NVMe SSD indicators

Green Indicator	Yellow Indicator	State Description
Off	Off	The NVMe SSD cannot be detected.
Steady green	Off	The NVMe SSD is detected and working properly.
Blinking green (2 Hz)	Off	Data is being read from or written to the NVMe SSD.
Off	Blinking yellow (2 Hz)	The NVMe SSD is being located or hot-swapped.
Off	Blinking yellow (0.5 Hz)	The NVMe SSD completes the hot removal process and is removable.
Steady green or off	Steady yellow	The NVMe SSD is faulty.

Flexible NIC Indicators

Supported flexible NICs include:

- SM211 (chip: i350) with two GE electrical ports
- SM210 (chip: 5719)/SM212 (chip: i350) with four GE electrical ports
- SM233 (chip: X540) with two 10GE electrical ports
- SM252 (chip: CX3) with one 56G IB optical port
- SM251 (chip: CX3) with two 56G IB optical ports

Use the **Huawei Server Compatibility Checker** to obtain the details about the flexible NICs.

The following figures show the indicators on these flexible NICs.

Figure 4-16 SM211 with two GE electrical ports

 


Figure 4-17 SM210/SM212 with four GE electrical ports

 


Figure 4-18 SM233 with two 10GE electrical ports



Figure 4-19 SM252 with one 56G IB optical port



Connection status indicator

Data transmission status indicator

Figure 4-20 SM251 with two 56G IB optical ports



Connection status indicator

Data transmission status indicator

Table 4-9 Description of flexible NIC indicators

NIC Type	Indicator	State Description
• Flexible NIC with two GE electrical ports	Data transmission status indicator	Blinking yellow: Data is being transmitted.Off: No data is being transmitted.
• Flexible NIC with four GE electrical ports	Connection status indicator	 Steady green: The network port is properly connected. Off: The network port is not connected.
Flexible NIC with two 10GE electrical ports	Transmission rate indicator	 Steady green: The data transmission rate is 10 Gbit/s. Steady yellow: The data transmission rate is 1 Gbit/s. Off: The data transmission rate is 10/100 Mbit/s.

NIC Type	Indicator	State Description		
	Connection status indicator or data	Steady green: The network port is properly connected.		
	transmission status indicator	 Blinking green: Data is being transmitted. 		
		Off: No data is being transmitted or the network port is not connected.		
• Flexible NIC with one 56G IB optical	Connection status indicator	• Steady green: The physical link is normal.		
portFlexible NIC with		 Blinking green: The physical link is abnormal. 		
two 56G IB optical ports		Off: No physical link is set up.		
optical polis	Data transmission status indicator	Steady yellow: The logical link is normal but no data is being transmitted.		
		Blinking yellow: Data is being transmitted.		
		• Off: No logical link is set up.		

4.4 Riser Cards and PCIe Slots

Figure 4-21 shows the riser cards supported by the server.

Figure 4-21 Riser cards

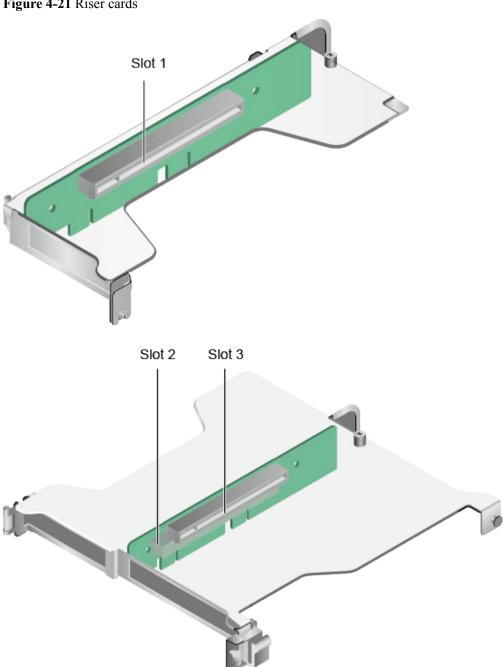


Figure 4-22 shows the PCIe slots on the rear panel.

Figure 4-22 PCIe slots



PCIe riser module (PRM) 1 provides slot 1 and PRM 2 provides slots 2 and 3.

Table 4-10 describes the PCIe slots.

NOTE

If CPU 2 is not installed, the PCIe slots provided by PRM 2 and the flexible NIC are unavailable.

Table 4-10 PCIe slot description

PCIe Devic e	CP U	PCIe Stand ard	Conn ector Band width	Bus Band width	Port Numb er	ROOT PORT (B/D/F)	Device (B/D/F)	Slot Size
Slot 1	CP U 1	PCIe 3.0	x16	x16	Port 2A	3A/00/0	3B/00/0	Half-height half-length
Slot 2	CP U 2	PCIe 3.0	x16	x16	Port 1A	85/00/0	86/00/0	Half-height half-length
Slot 3	CP U 2	PCIe 3.0	x16	x8	Port 2C	AE/ 02/0	B2/00/0	Full-height half-length
RAID controll er card	CP U 1	PCIe 3.0	x8	x8	Port 1C	17/02/0	1D/00/0	_
Flexibl e NIC	CP U 2	PCIe 3.0	x8	x8	Port2A	AE/ 00/0	AF/ 00/0	_

NOTE

- B/D/F stands for Bus/Device/Function Number.
- ROOT PORT (B/D/F) indicates the bus number of a CPU internal PCIe root port. Device (B/D/F) indicates the bus number (displayed on the OS) of a LOM or external PCIe port.
- The PCIe slots that support full-height half-length PCIe cards are backwards compatible with half-height half-length PCIe cards.
- The PCIe slots that support PCIe x16 cards are backwards compatible with PCIe x8, PCIe x4, and PCIe x1 cards.
- Table 4-10 lists the default values of B/D/F. If CPUs are not in full configuration or a PCIe card with a PCI bridge is configured, the values of B/D/F may differ.
- For a server with NVMe SSDs, slot 1 supports only an NVMe SSD adapter.


PCIe GPU Configuration Rules

The server supports a maximum of two half-height half-length PCIe x16 GPUs, which can be installed in slots 1 and 2.

4.5 Physical Structure

Figure 4-23 shows the components of a server.

Figure 4-23 1288H V5 components

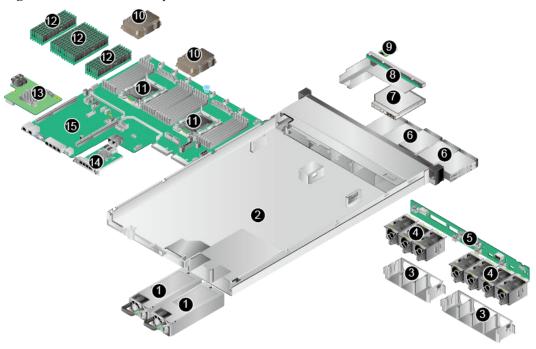

1	PSU	2	Chassis
3	Fan module bracket	4	Fan module
5	Front hard disk backplane	6	Hard disk
7	DVD-RW drive	8	Indicator board
9	VGA board	10	Heat sink
11	CPU	12	DIMM

14

Flexible NIC

13

15

RAID controller card

Mainboard

5 Product Specifications

- 5.1 Technical Specifications
- 5.2 Physical and Environmental Specifications

5.1 Technical Specifications

Table 5-1 Technical specifications

Item	Specifications		
Form factor	1U rack server		
CPU	One or two Intel® Xeon® Scalable 3100, 4100, 5100, 6100, and 8100 processors • A maximum of 28 cores (2.5 GHz) • Maximum frequency: 3.6 GHz (four cores)		
	• Two UPI links: 10.4 GT/s maximum transmission speed per link		
	• Maximum L3 cache capacity per core: 1.375 MB		
	Maximum thermal design power (TDP): 205 W		
Chipset	Intel C622		
Memory	A maximum of 24 DDR4 RDIMMs or LRDIMMs		
	RDIMM: twenty-four 32 GB RDIMMs for two CPUs, with a maximum memory capacity of 768 GB		
	LRDIMM: twenty-four 64 GB LRDIMMs for two CPUs, with a maximum memory capacity of 1536 GB		
	Maximum memory speed: 2666 MT/s		
	 Memory protection: Error Checking and Correcting (ECC), Mirrored Channel Mode, Single Device Data Correction (SDDC), Rank Sparing Mode, and Lockstep 		
	NOTE DIMMs on one server must be of the same model, type ((RDIMM or LRDIMM), and specifications (capacity, bit width, number of ranks, and height).		

Item	Specifications		
Storage	• Supports various hard disk configurations. For details, see Table 6-4 .		
_	Supports two M.2 SSD modules.		
	NOTE		
	 An M.2 SSD is designed only for installing a Linux OS and functions as a boot device. Small-capacity M.2 SDDs (such as 32 GB or 64 GB SSDs) have short endurance and do not support logging. If a small-capacity M.2 SSD is used as the boot device, a dedicated log hard disk or log server is required for logging. For example: You can dump VMware logs in either of the following ways: 		
	-Redirect /scratch. For details, visit https://kb.vmware.com/s/article/1033696.		
	-Configure syslog. For details, visit https://kb.vmware.com/s/article/2003322.		
	 M.2 SSDs have short endurance and cannot be used as data storage devices. M.2 SSDs have write-through risks in a short time, and cannot be used in frequent data erase operations. SSDs or HDDs with enterprise-level high DWPD can be used for data storage. 		
	 Installing write-intensive service software on M.2 SSDs will accelerate the write life consumption and result in perpetual damage of M.2 SSDs. Therefore, M.2 SSDs cannot be used for such services and cannot be used in cache scenarios. 		
	Supports hard disk hot swap.		
	• Supports RAID 0, 1, 10, 1E, 5, 50, 6, and 60, provides a supercapacitor to protect cache data from power failures, and supports RAID state migration, RAID configuration memory, self-diagnosis, and web-based configuration.		
	NOTE If the BIOS is in Legacy mode, the server does not support a 4K hard disk as the system boot disk.		
Network port	Two 10GE electrical or optical LOM ports (provided by the PCH), supporting NC-SI, WOL, and PXE		
	• Two GE electrical LOM ports (provided by the PCH), supporting NC-SI, WOL, and PXE		
	Network ports provided by the flexible NIC:		
	- Two GE electrical ports, supporting NC-SI, WOL, and PXE		
	- Four GE electrical ports, supporting NC-SI, WOL, and PXE		
	- Two 10GE electrical ports, supporting NC-SI, WOL, and PXE		
	- One 56G IB optical port, not supporting NC-SI, WOL, or PXE		
	- Two 56G IB optical ports, not supporting NC-SI, WOL, or PXE		
	NOTE If a server is forcibly powered off, the NC-SI function of LOM ports will be unavailable and you need to refresh the iBMC WebUI to restore the function. The WOL function will also be unavailable.		

Item	Specifications		
RAID controller card	The RAID controller card does not occupy a standard PCIe slot, which improves system scalability.		
	The RAID controller card supports RAID level migration and RAID configuration memory. The server supports the following RAID controller cards:		
	• LSI SAS3008 (SR130): supports RAID 0, 1, 10, and 1E, and does not support out-of-band iBMC management.		
	 LSI SAS3008 (SR130-M): supports the IT mode and out-of-band iBMC management, but does not support RAID arrays. 		
	• LSI SAS3108 (SR430C-M): supports RAID 0, 1, 10, 5, 50, 6, and 60, supports a supercapacitor for power-off protection, and supports out-of-band iBMC management.		
	 Broadcom SAS3508 (SR450C-M 2G/4G): supports RAID 0, 1, 10, 5, 50, 6, and 60, a supercapacitor for power-off protection, and out-of-band iBMC management. 		
	 Broadcom SAS3408 (SR150-M): supports RAID 0, 1, and 10, and out-of-band iBMC management, but does not support power-off protection. 		
PCIe slot	• The server provides five PCIe 3.0 slots, among which one is a dedicated PCIe slot for a RAID controller card, one is a dedicated PCIe slot for a flexible NIC, and the other three are standard PCIe slots. The specifications of the three standard PCIe slots are as follows:		
	 PRM 1 provides one standard half-height half-length PCIe 3.0 x16 slot (bus bandwidth: PCIe 3.0 x16). 		
	- PRM 2 provides one standard half-height half-length PCIe 3.0 x16 slots (bus bandwidth: PCIe 3.0 x16) and one standard full-height half-length PCIe 3.0 x16 slot (bus bandwidth: PCIe 3.0 x8).		
	 One Huawei SSD card, which greatly improves I/O performance for search, cache, and download services 		
	• One P4 GPU		
	NOTE Use the Huawei Server Compatibility Checker to check the PCIe cards supported by the server. For PCIe cards not listed in the Huawei Server Compatibility Checker, contact your local Huawei sales representative or Huawei technical support.		

Item	Specifications		
Port	• One USB 2.0 port, one USB 3.0 port, and one DB15 VGA port on the front panel		
	Two USB 3.0 ports, one DB15 VGA port, one RJ45 serial port, one system management port, two GE electrical ports, and two 10GE electrical ports or two 10GE optical ports on the rear panel		
	One built-in USB 3.0 port and two built-in SATA ports		
	NOTE		
	• The front USB 3.0 ports are connected to the built-in USB 3.0 port through a USB signal cable. Otherwise, the built-in USB 3.0 port is unavailable.		
	The built-in USB port cannot be used for installing OSs.		
Fan module	Seven hot-swappable fan modules, allowing one-fan failures NOTE		
	The fans on one server must be of the same model.		
System	• UEFI		
management	• iBMC		
	Uses an independent port. Supports SNMPv1/SNMPv2c/SNMPv3, IPMI 2.0, and Redfish 1.0, and provides the GUI, virtual KVM, virtual media, Serial Over LAN (SOL), intelligent power supply, remote control, hardware and monitoring features.		
	• NC-SI		
	 Supports Huawei eSight management software and integration with third-party management systems, such as VMware vCenter, Microsoft SystemCenter, and Nagios. 		
Security	Power-on password		
	Administrator password		
	● TPM		
	• Front bezel (optional) The front bezel is installed on the front panel and comes with a security lock to prevent unauthorized operations on hard disks.		
Video card	Integrates an SM750 graphics card chip to the mainboard to provide a memory capacity of 32 M and support a maximum resolution of 1920 x 1200 at 60 Hz with 16 M colors. NOTE		
	The maximum resolution 1920 x 1200 is supported only when a compatible graphics card driver is installed. Otherwise, only the default resolution supported by the OS is available.		

5.2 Physical and Environmental Specifications

Physical Specifications

Table 5-2 Physical specifications

Item	Specifications		
Dimensions (H x W x D)	• Chassis with 3.5-inch hard disks: 43 mm x 436 mm x 748 mm (1.69 in. x 17.17 in. x 29.45 in.)		
	• Chassis with 2.5-inch hard disks: 43 mm x 436 mm x 708 mm (1.69 in. x 17.17 in. x 27.87 in.)		
Installation space	The server fits into a universal cabinet that complies with the IEC 297 standard.		
	Cabinet width: 19 in.		
	• Cabinet depth: ≥ 1000 mm (39.37 in.)		
	Requirements for guide rail installation:		
	L-shaped guide rails: apply only to a Huawei cabinet.		
	• Adjustable guide rails: apply to a cabinet with a distance of 543.5 mm to 848.5 mm (21.40 in. to 33.41 in.) between the front and rear mounting bars.		
	Holding rails: apply to a cabinet with a distance of 610 mm to 914 mm (24.02 in. to 35.98 in.) between the front and rear mounting bars.		
Weight in full	Net weight:		
configuration	• With eight 2.5-inch hard disks: 17.3 kg (38.15 lb)		
	• With four 3.5-inch hard disks: 18.4 kg (40.57 lb)		
	• With ten 2.5-inch hard disks: 17.8 kg (39.25 lb)		
	Packaging materials: 5 kg (11.03 lb)		
Power consumption	The power consumption varies with the server configuration. Use the Huawei Server Power Calculator to calculate the power consumption.		

Item	Specifications
Acoustic noise	The data listed in the following is the declared A-weighted sound power levels (LWAd) and declared average bystander position A-weighted sound pressure levels (LpAm) when the server is operating in a 23°C (73.4°F) ambient environment. Noise emissions are measured in accordance with ISO 7999 (ECMA 74) and declared in accordance with ISO 9296 (ECMA 109).
	• Idle:
	- LWAd: 5.92 Bels
	- LpAm: 42.3 dBA
	• Operating:
	- LWAd: 6.14 Bels
	- LpAm: 46.3 dBA
	NOTE The actual sound levels generated when the server is operating vary depending on the server configuration, workload, and ambient temperature.

Environmental Specifications

Temperature

- Operating temperature: 5°C to 45°C (41°F to 113°F) (ASHRAE Class A3 and A4 compliant). For details, see Table 5-3.
- Storage temperature: -40° C to $+65^{\circ}$ C (-40° F to $+149^{\circ}$ F).
- Temperature change rate: < 20°C/h (36°F/h).

Table 5-3 Operating temperature specifications

Model	Maximum Operating Temperature 35°C (95°F)	Maximum Operating Temperature 40°C (104°F) (ASHRAE Class A3 Compliant)	Maximum Operating Temperature 45°C (113°F) (ASHRAE Class A4 Compliant)
Server with four 3.5-inch hard disks	Supports all configurations.	 Does not support PCIe SSD cards. Does not support passive cooling GPUs. Does not support Intel[®] Xeon[®] Platinum 8180/8168 and 	 Does not support PCIe SSD cards. Does not support passive cooling GPUs. Supports only Intel[®] Xeon[®] Platinum 8153 and Gold 6152/6140/612

Model	Maximum Operating Temperature 35°C (95°F)	Maximum Operating Temperature 40°C (104°F) (ASHRAE Class A3 Compliant)	Maximum Operating Temperature 45°C (113°F) (ASHRAE Class A4 Compliant)
Server with eight 2.5-inch hard disks		Gold 6154 CPUs.	6/5118 CPUs, and CPUs with a maximum TDP of 105 W. • Does not support IB and OPA cards.
Server with ten 2.5-inch hard disks	Does not support SP351- BC51IBMB-IB cards.	N/A	N/A

NOTE

- If one fan fails, the highest operating temperature of the server is 5°C (9°F) lower than that in normal cases.
- When GPUs are used, the failure of one fan may result in performance deterioration.
- If one SP351-BC51IBMB-IB card is installed on the server with ten 2.5-inch disks, the server supports the maiximum operating temperature of 30°C (86°F).

Humidity

- Operating humidity: 8% RH to 90% RH (non-condensing)
- Storage humidity: 5% to 95% RH (non-condensing)
- Humidity change rate: < 20% RH/h

Altitude

- \sim \leq 3048 m (9999.88 ft). For altitudes above 900 m (2952.72 ft), the operating temperature decreases by 1°C (1.8°F) for every increase of 300 m (984.24 ft).
- HDDs are not supported when the altitude is higher than 3000 m (9842.4 ft).

Corrosive gaseous contaminant

- Copper corrosion rate test requirement: The corrosion product thickness growth rate is lower than 300 Å/month (meeting level G1 requirements of the ANSI/ ISA-71.04-2013 standard on gaseous corrosion).
- Silver corrosion rate test requirement: The corrosion product thickness growth rate is lower than 200 Å/month.

Particle contaminant

The equipment room environment meets the requirements of ISO 14664-1 Class 8.
 You are advised to hire a professional organization to monitor particle contaminants in the equipment room.

- The equipment room is free from explosive, conductive, magnetic conductive, and corrosive dust.

6 Component Compatibility

Use the **Huawei Server Compatibility Checker** to check the software and hardware supported by the server.

- 6.1 CPU
- 6.2 Memory
- 6.3 Storage
- 6.4 I/O Expansion
- **6.5 PSU**
- 6.6 OS and Software Support

6.1 CPU

One or two Intel® Xeon® Scalable 3100, 4100, 5100, 6100, and 8100 processors

- A maximum of 28 cores (2.5 GHz)
- Maximum frequency: 3.6 GHz (four cores)
- Two UPI links: 10.4 GT/s maximum transmission speed per link
- Maximum L3 cache capacity per core: 1.375 MB
- Maximum thermal design power (TDP): 205 W

NOTE

- For details about component options, consult the local Huawei sales representatives.
- CPUs on the same server must be of the same model.
- For details about CPUs, visit https://www.intel.com/content/www/us/en/homepage.html.

6.2 Memory

Memory Configuration Rules

A server provides 24 DDR4 DIMM slots. Each processor supports six memory channels and each memory channel supports two DDR4 DIMMs.

Observe the following rules when configuring DIMMs:

- 1. DIMMs of different types (RDIMMs and LRDIMMs) cannot be installed on one server.
- 2. Each channel supports a maximum of eight ranks.

NOTE

A channel supports more than eight ranks for LRDIMMs, because a quad-rank LRDIMM generates the same electrical load as a single-rank RDIMM on a memory bus.

 The maximum number of DIMMs to be installed on the server varies with the processor type, DIMM type, number of ranks, and operating voltage. For details, see Maximum number of DIMMs in the following tables.

NOTE

Restriction of the number of ranks supported by each channel on the maximum number of DIMMs supported by each channel:

Number of DIMMs supported by each channel \leq Number of ranks supported by each memory channel/Number of ranks supported by each DIMM

- 4. All DIMMs operate at the same speed, which is the smaller value of:
 - Memory speed supported by a CPU
 - Lowest maximum operating speed for the selected memory configuration. For details, see **Maximum operating speed** in the following tables.

Table 6-1 RDIMM configuration

	Specifications		
	Dual rank		
	2666		
	1.2		
Ms	24		
MM (GB)	32		
apacity (GB)	768		
apacity at maximum	768		
One DIMM per channel	2666		
Two DIMMs per channel	2666		
	MM (GB) apacity (GB) apacity at maximum One DIMM per channel Two DIMMs per		

Note: The maximum number of DIMMs listed in this table is based on dual-processor configuration. These values are halved for a server with only one processor.

Table 6-2 LRDIMM configuration


Item		Specifications		
Rank		Quad rank		
Rated speed (MT/s)	2666		
Operating voltage ((V)	1.2		
Maximum number	of DIMMs	24		
Maximum capacity	per DIMM (GB)	64		
Maximum total me	mory capacity (GB)	1536		
Maximum total me operating speed (G	mory capacity at maximum B)	1536		
Maximum	One DIMM per channel	2666		
operating speed (MT/s)	Two DIMMs per channel	2666		

Note: The maximum number of DIMMs listed in this table is based on dual-processor configuration. These values are halved for a server with only one processor.

Memory Slot Configuration Rules

Figure 6-1 shows the DIMM slot numbers and positions.

Figure 6-1 DIMM slots

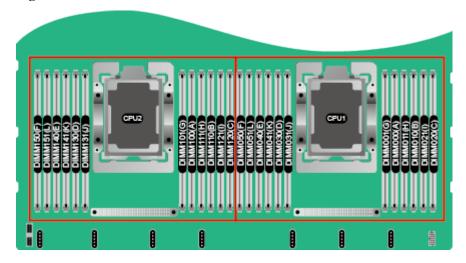

- The server supports DIMMs of 8 GB, 16 GB, 32 GB, and 64 GB. A server fully configured with DIMMs provides up to 1536 GB memory.
- The server provides 24 DDR4 DIMM slots. Each CPU supports six channels. **Table 6-3** lists channels for each CPU.

Table 6-3 Channels

CPU	Channel	DIMM
CPU 1	A	DIMM000(A)
		DIMM001(G)
	В	DIMM010(B)
		DIMM011(H)
	С	DIMM020(C)
		DIMM021(I)
	D	DIMM030(D)
		DIMM031(J)
	Е	DIMM040(E)
		DIMM041(K)
	F	DIMM050(F)
		DIMM051(L)
CPU 2	A	DIMM100(A)
		DIMM101(G)
	В	DIMM110(B)
		DIMM111(H)
	С	DIMM120(C)
		DIMM121(I)
	D	DIMM130(D)
		DIMM131(J)
	Е	DIMM140(E)
		DIMM141(K)
	F	DIMM150(F)
		DIMM151(L)

DIMM Installation Rules



At least one DIMM must be configured in slots supported by CPU 1.

Balanced DIMM configuration can deliver the optimal memory performance. Unbalanced configuration reduces memory performance and is not recommended.

In unbalanced DIMM configuration, DIMMs are not evenly configured for memory channels and (or) processors.

- Unbalanced DIMM configuration for channels: Five, seven, nine, ten, or eleven DIMMs for a processor.
- Unbalanced DIMM configuration for processors: Different number of DIMMs are configured for the processors.

Figure 6-2 DIMM installation rules (one CPU)

						1	Vum	ber (of DI	MM	S			
CPU	Channal	DIMM Slot	(√: recommended o: not recommended)											
CPU	Channel	DIMINI SIOU	✓	✓	✓	✓	0	1	o	1	0	О	O	✓
			1	2	3	4	5	6	7	8	9	10	11	12
	A	DIMM000(A)	•	•	•	•	•	•	•	•	•	•	•	•
	A	DIMM001(G)							•	•	•	•	•	•
	В	DIMM010(B)		•	•	•	•	•	•	•	•	•	•	•
	ь	DIMM011(H)								•	•	•	•	•
	С	DIMM020(C)			•		•	•	•		•	•	•	•
CPU1	C	DIMM021(I)									•		•	•
CPUI	D	DIMM030(D)				•	•	•	•	•	•	•	•	•
	D	DIMM031(J)								•		•	•	•
	Е	DIMM040(E)				•	•	•	•	•	•	•	•	•
		DIMM041(K)								•		•	•	•
	F	DIMM050(F)						•	•		•	•	•	•
	Г	DIMM051(L)												•

Figure 6-3 DIMM installation rules (two CPUs)

CPU	Channel	DIMM Slot	Number of DIMMs (√: recommended ∘: not recommended					led)																		
CPU	Спаппет	DIMINI SIOU	0	✓	0	✓	0	>	0	✓	0	0	0	1	0	0	0	✓	0	0	0	0	0	0	0	✓
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
	Α	DIMM000(A)	٠	•	٠	٠	٠	•	•	٠	٠	•	•	٠	•	•	•	•	•	•	•	•	•	•	•	•
		DIMM001(G)														÷	•			•	•				•	•
	В	DIMM010(B)			•	•	•	•	•	•	•	•	•	•	•	•										
		DIMM011(H)															٠	٠	٠	٠	٠	٠	٠	٠	•	٠
	С	DIMM020(C)					٠	٠			٠	٠	٠	٠	•	٠			•	•	٠	٠	٠	•	٠	•
CPU1		DIMM021(I)																	٠	٠			•	٠	٠	٠
0101	D	DIMM030(D)							•	٠	•	٠	•	٠	•	•	•	٠	•	•	•	٠	•	•	٠	•
		DIMM031(J)															•	٠			•	•	•	•	•	•
	E	DIMM040(E)							•	٠	•	•	•	•	•	٠	•	•	•	•	•	•	•	•	•	•
	L	DIMM041(K)															•	•			•	•	•	•	•	•
	F	DIMM050(F)											•	•	•	•			•	•	•	•	•	•	•	•
	г	DIMM051(L)																							•	•
	Α	DIMM100(A)		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	A	DIMM101(G)														•	•	•	•	•	•	•	•	•	•	•
	В	DIMM110(B)				•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	В	DIMM111(H)																•	•	•	•	•	•	•	•	•
		DIMM120(C)						•	•			•	•	•	•	•	•			•	•	•	•	•	•	•
	C	DIMM121(I)																		•	•			•		
CPU2	_	DIMM130(D)								•	•	•	•	•	•	•	•	•	•	•	•	•	•		•	•
	D	DIMM131(J)																								
		DIMM140(E)																								
	E	DIMM141(K)																								
		DIMM150(F)														•										
	F	DIMM151(L)																								•

Memory Protection Technologies

The server supports the following memory protection technologies:

- ECC
- Mirrored Channel Mode
- SDDC
- Rank Sparing Mode
- Lockstep

Supported DIMMs

NOTE

- For details about component options, consult the local Huawei sales representatives.
- DIMMs on one server must be of the same model.

6.3 Storage

Table 6-4 lists hard disk configurations supported by the server.

NOTE

The following table is for reference only. For details about component options, consult the local Huawei sales representatives.

Table 6-4 Hard disk configurations

Configuration	Maximum Front Hard Disks	Hard Disk Management Mode
Server with four 3.5-inch hard disks	4 (SAS/SATA hard disks)	One RAID controller card
Server with eight 2.5-inch hard disks (1)	8 (SAS/SATA hard disks)	One RAID controller card
Server with eight 2.5-inch hard disks (2)	 Slots 0 to 3 support only SAS/SATA hard disks. Slots 4 to 7 support SAS/SATA hard disks and NVMe SSDs. 	One RAID controller card

Configuration	Maximum Front Hard Disks	Hard Disk Management Mode
Server with ten 2.5-inch hard disks	 Slots 0 and 1 support only SAS or SATA hard disks. Slots 2 and 3 support SAS or SATA hard disks, or NVMe SSDs. Slots 4 to 9 support only NVMe SSDs. 	One RAID controller card

The following figures show the hard disk slots for these configurations.

• 4 x 3.5-inch disks

Figure 6-4 4 x 3.5-inch disks



• 8 x 2.5-inch disks

Figure 6-5 8 x 2.5-inch disks



• 10 x 2.5-inch disks

Figure 6-6 10 x 2.5-inch disks



Table 6-5 lists the comparison between RAID levels in performance and disk usage.

Table 6-5 RAID level comparison

RAID Level	Reliability	Read Performance	Write Performance	Hard Disk Usage
RAID 0	Low	High	High	100%
RAID 1	High	High	Low	50%
RAID 5	Relatively high	High	Medium	(N - 1)/N
RAID 6	Relatively high	High	Medium	(N - 2)/N

RAID Level	Reliability	Read Performance	Write Performance	Hard Disk Usage
RAID 10	High	High	Medium	50%
RAID 1E	High	Medium	Medium	50%
RAID 50	High	High	Relatively high	(N - M)/N
RAID 60	High	High	Relatively high	(N - M x 2)/N

Note: N indicates the number of member disks in a RAID array, and M indicates the number of spans in a RAID array.

6.4 I/O Expansion

The server supports a wide range of PCIe cards for you to choose based on the card type and transmission speed:

- Fiber Channel (FC) host bus adapter (HBA)
- Converged network adapter (CNA)
- Network expansion card
- SSD card

NOTE

For details about component options, consult the local Huawei sales representatives.

6.5 PSU

Table 6-6 lists the PSUs supported by the server.

Table 6-6 Supported PSUs

PSU Model	Rated Power	Rated Input Voltage
550 W AC Platinum PSU	550 W	 AC: 100 V to 240 V HVDC: 192 V to 288 V
900 W AC Platinum PSU	900 W	 AC: 100 V to 240 V HVDC: 192 V to 288 V
1500 W AC Platinum PSU	1500 W	 AC: 100 V to 240 V HVDC: 192 V to 288 V

\square NOTE

- The PSUs are hot-swappable and work in 1+1 redundancy mode.
- Table 6-6 is for reference only. For details about component options, see the Huawei Server Compatibility Checker.
- PSUs on one server must be of the same model.
- The PSUs provide short-circuit protection. The PSUs that support dual input live wires provide double-pole fuse.
- If the input voltage ranges from 100 V to 132 V AC, the output power of the 1500 W AC Platinum PSU decreases to 1000 W, and the 550 W AC Platinum PSU is not affected.
- The power of a 1500 W AC Platinum PSU can reach 1700 W. When two such PSUs are installed, they can be used as 1700 W PSUs.

6.6 OS and Software Support

For details about component options, see the **Huawei Server Compatibility Checker**.

ZSystem Management

The server uses Huawei's proprietary iBMC for remote server management. The iBMC complies with IPMI 2.0 and provides highly reliable hardware monitoring and management.

The iBMC supports the following features and protocols:

- KVM and text console redirection
- Remote virtual media
- IPMI
- SNMP
- Redfish 1.0
- Login using a web browser

Table 7-1 describes the features of the iBMC.

Table 7-1 iBMC features

Feature	Description
Management interface	Integrates with any standard management system through the following interfaces:
	• IPMI
	• CLI
	• HTTPS
	• SNMP
	Redfish
Fault detection	Detects faults and accurately locates faults in hardware, for example, an FRU.
Alarm management	Supports alarm management and reports alarms using the SNMP trap, Simple Mail Transfer Protocol (SMTP), and syslog service to ensure 24/7 operating.
Integrated virtual KVM	Provides remote maintenance measures for troubleshooting.

Feature	Description
Integrated virtual media	Virtualizes local media devices, images, USB keys, and folders into media devices on a remote server, simplifying OS installation. (The virtual DVD-ROM drive supports a maximum transmission rate of 8 MB/s.)
WebUI	Provides a user-friendly graphical user interface (GUI), which simplifies users' configuration and query operations.
Fault reproduction	Reproduces faults to facilitate fault diagnosis.
Screen snapshots and screen videos	Allows you to view screenshots and videos without login, which facilitates routine preventive maintenance inspection (PMI).
Domain Name Service (DNS)/ Active Directory (AD)	Supports the DNS and AD, significantly simplifying network and configuration management.
Dual-image backup	Starts software from a backup image if the software fails.
Asset management	Supports intelligent asset management.
Intelligent power management	Uses the power capping technology to increase deployment density, and uses dynamic energy saving to lower operating expenses.
IPv6	Supports IPv6 to ensure sufficient IP addresses.
Network Controller Sideband Interface (NC-SI)	Supports NC-SI, which allows you to access the iBMC through the service network port.

8 Warranty

According to the *Huawei Warranty Policy for Servers & Storage Products (Warranty Policy* for short), Huawei provides a three-year warranty for the server, a one-year warranty for DVD-RW drives and batteries, and a three-month warranty for software media. The *Warranty Policy* stipulates warranty terms and conditions, including the available services, response time, terms of service, and disclaimer.

The warranty terms and conditions may vary by country, and some services and/or parts may not be available in all countries. For more information about warranty services in your country, contact Huawei technical support or the local Huawei representative office.

Table 8-1 describes the warranty service response time.

Table 8-1 Response time

Service	Response Time	Description	Remarks
Help Desk	24/7	Available 24 hours a day, 7 days a week (00:00 to 24:00, Monday to Sunday)	None
Remote troubleshootin g	24/7	Available 24 hours a day, 7 days a week (00:00 to 24:00, Monday to Sunday)	The response time is the period between the end of a customer's service request and beginning of the response by the technical support to offer troubleshooting services.

Service	Response Time		Description	Remarks
Online technical support	24/7		Huawei enterprise support website (http:// e.huaw ei.com): available 24 hours a day, 7 days a week (00:00 to 24:00, Monday to Sunday)	None
Licensing of software updates	24/7		Available 9 hours a day, 5 days a week (09:00 to 18:00, Monday to Friday), excluding official holidays.	The repaired or replacement parts will be shipped within 45 calendar days after Huawei receives the defective parts.
Return for repair	Outside China	9/5 hours, shipment within 45 calendar days	Available 9 hours a day, 5 days a week (09:00 to 18:00, Monday to Friday), excluding official holidays.	The repaired or replacement parts will be shipped within 45 calendar days after Huawei receives the defective parts.
	In China	10/5 hours, next business day	Available 10 hours a day, 5 days a week (08:00 to 18:00, Monday to Friday), excluding official holidays. Arrival: NBD	1. Service requests submitted after 15:30 will be handled the next business day. 2. The response time starts when a remote decision is made to appoint an onsite engineer.

Table 8-2 describes warranty services provided by Huawei.

Table 8-2 Warranty services

Service	Description	
Help Desk	Huawei provides 24-hour after-sales technical support (such as handling requests for troubleshooting and hardware repair), receives and handles customer inquiries, complaints, and suggestions through a dedicated hotline.	
Remote troubleshooting	After receiving a service request for rectifying a network or system fault, Huawei engineers will analyze and handle the fault remotely and proceed to rectify it in the shortest possible time. There are two methods for remote troubleshooting: telephone support and remote access.	
Online technical support	Huawei enterprise support website (http://e.huawei.com) provides product and technical materials, such as product manuals, configuration guides, networking case study, and maintenance experience collections. Registered users can access the website and download required documents.	
Licensing of software updates	To ensure that the devices operate stably, Huawei provides software patches whenever necessary.	
Return for repair	Huawei provides repair or replacement services for customers within the promised time to meet customer needs for spare parts. You can return defective parts to the designated Huawei site after submitting a service request. Huawei provides a three-year warranty for parts replacement and limited onsite repair for the servers used in China. Huawei provides a 10-hour-a-day, 5-day-a-week NBD support program. Huawei provides a three-year warranty for parts replacement and repair for the servers used outside China. Huawei provides a 9-hour-a-day, 5-day-a-week NBD support program. Service requests will be handled the next business day. Huawei delivers the repaired or new parts within 45 calendar days after receiving the defective parts.	

9 Certifications

Country/ Region	Certification	Standards
Europe	WEEE	2002/96/EC, 2012/19/EU
Europe	RoHS	2002/95/EC, 2011/65/EU, EN 50581:2012
Europe	REACH	EC No. 1907/2006
Europe	CE	Safety: EN 60950-1:2006+A11:2009+A1:2010+A12:2011 EMC: • EN 55022:2010 • CISPR 22:2008 • EN 55024:2010 • CISPR 24:2010 • ETSI EN 300 386 V1.6.1:2012 • ETSI ES 201 468 V1.3.1:2005
China	CCC	GB4943.1-2011 GB9254-2008 (Class A) GB17625.1-2012
China	RoHS	SJ/T-11363-20006 SJ/T-11364-20006 GB/T 26572-2011
Australia	C-tick	AS/NZS CISPR22:2009
America	FCC	FCC Part 15 (Class A)

Country/ Region	Certification	Standards
America	NTRL-UL	UL 60950-1, 2nd Edition, 2011-12-19 (Information Technology Equipment - Safety - Part 1: General Requirements)
		CSA C22.2 No.60950-1-07, 2nd Edition, 2011-12 (Information Technology Equipment-Safety-Part 1: General Requirements)
Canada	IC	ICES-003 Class A
Canada	NRTL-UL	UL 60950-1, 2nd Edition, 2011-12-19
		(Information Technology Equipment-Safety-Part 1: General Requirements)
Nigeria	SONCAP	IEC 60950-1: 2005 (2nd Edition) + A1:2009
		EN 60950-1: 2006+A11:2009+A1:2010 + A12:2011
Kingdom of	SASO	IEC 60950-1: 2005 (2nd Edition) + A1:2009
Saudi Arabia (KSA)		EN 60950-1: 2006+A11:2009+A1:2010 + A12:2011
Global	СВ	IEC 60950-1
Japan	VCCI	VCCI V-4:2012
Saudi, Nigeria, Tanzania, Uganda, Kuwait, Algeria, Botswana, Qatar, Egypt	Multi- country_certifi cate	IEC 60950-1: 2005 (2nd Edition) + A1:2009 EN 60950-1: 2006+A11:2009+A1:2010 + A12:2011

$10_{\rm References}$

For more information about the product, see the following documents:

- Server Data Sheet
- Server Documentation
- Huawei Server Information Self-Service Platform